

i>clicker Self-Paced Polling Student Guide

To answer multiple choice (A-E) questions using the i>clicker2 remote:

1. Press the **orange button** to turn on the i>clicker2 remote.



2. Press the **blue “mode/refresh” button** to ensure that you are in self-paced polling mode.




3. A large “1” appears with a cursor around it indicating the question number.

The self-paced polling symbol appears.



4. Press the **A-E buttons** to select your answer for question 1.

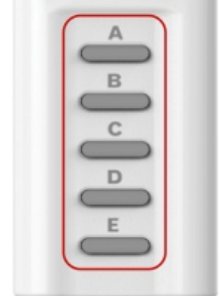

5. Your answer choice and a checkmark will appear on the screen, indicating that your answer for question 1 was received.

Recommended: Press **SEND** to confirm your answer choice.



6. Press the **UP** button on the cross navigation to advance to the next question.

Continue answering questions until you reach the final question and can't advance further.

Use the **UP** and **DOWN** buttons to review your answers. Confirm that you see a checkmark next to each answer choice. You may change or re-send your answer at any time as long as polling is active.



i>clicker Self-Paced Polling Student Guide

To answer numeric and alphanumeric questions using the i>clicker2 remote:

1. Press the **orange button** to turn on the i>clicker2 remote.



2. Press the **blue "mode/refresh" button** to ensure that you are in self-paced polling mode.



3. A large "1" appears with a cursor around it indicating the question number.

The self-paced polling symbol appears.



4. Press the **RIGHT** button on the cross navigation to move the cursor off the question number and onto the answer-entry line of the LCD.

An "A" appears.



5. Press the **UP** and **DOWN** buttons to change the "A" to another letter, a number, or a symbol.

Press **UP** to immediately select a letter.

Press **DOWN** to immediately select a number or symbol.



6. Press the **RIGHT** button to move your cursor to the next character position on the right.

Press the **UP** and **DOWN** buttons to change the character to a different letter, number, or symbol.

Press the **LEFT** and **RIGHT** arrows to move your cursor backwards or forwards in the answer-entry line to edit characters in your answer.



7. Continue entering characters until your answer is complete.

Press **SEND**.

A checkmark appears indicating that your answer was received and the cursor appears around the question number.



8. Press the **UP** button on the cross navigation to advance to the next question.

Continue answering questions until you reach the final question and can't advance further.

Use the **UP** and **DOWN** buttons to review your answers. Confirm that you see a checkmark next to each answer choice. You may change or re-send your answer at any time as long as polling is active.

